

F24-60 Wiring Diagram(Standard)

F24-60 输出接线图(标准机种)

Common line 公共线	Relay contact 继电器接点	Command 功能	Wire No 线号	Remark 功能标注
		AC-1	2-1	电源-1
		AC-2	2-2	电源-2
		MAIN-IN	2-3	总停-入
		MAIN-OUT	2-4	总停-出
		COM 1	2-21	公共线-1
		COM 2	2-22	公共线-2
		COM3	2-23	公共线-3
		COM4	2-24	公共线-4
		F1	1-1	备用键F1
		R0/START	1-2	备用键R0
		R1	1-3	备用键R1
		R2	1-4	备用键R2
		R3	1-5	备用键R3
		R4	1-6	备用键R4
		SW A	1-7	2位置开关(A)
		SW BA	1-8	3位置开关(B)-1
		SW BB	1-9	3位置开关(B)-2
		SW CA	1-10	3位置开关(C)-1
		SW CB	1-11	3位置开关(C)-2
		SW D	1-12	2位置开关(D)
		1Y(U)1	1-13	左摇杆-上1
		1Y(D)1	1-14	左摇杆-下1
		1Y(U/D)2	1-15	左摇杆-上/下2
		1Y(U/D)3	1-16	左摇杆-上/下3
		1Y(U/D)4	1-17	左摇杆-上/下4
		1Y(U/D)5	1-18	左摇杆-上/下5
		1X(L)1	1-19	左摇杆-左1
		1X(R)1	1-20	左摇杆-右1
		1X(L/R)2	1-21	左摇杆-左/右2
		1X(L/R)3	1-22	左摇杆-左/右3
		1X(L/R)4	1-23	左摇杆-左/右4
		1X(L/R)5	1-24	左摇杆-左/右5
		2Y(U)1	2-5	右摇杆-上1
		2Y(D)1	2-6	右摇杆-下1
		2Y(U/D)2	2-7	右摇杆-上/下2
		2Y(U/D)3	2-8	右摇杆-上/下3
		2Y(U/D)4	2-9	右摇杆-上/下4
		2Y(U/D)5	2-10	右摇杆-上/下5
		2X(L)1	2-11	右摇杆-左1
		2X(R)1	2-12	右摇杆-右1
	2X(L/R)2	2-13	右摇杆-左/右2	
	2X(L/R)3	2-14	右摇杆-左/右3	
	2X(L/R)4	2-15	右摇杆-左/右4	
	2X(L/R)5	2-16	右摇杆-左/右5	
	(AUX)1	2-17		
	(AUX)2	2-18		
	(AUX)3	2-19		
	(AUX)4	2-20		